

# LATTISSIMA ONE MOJ APARAT

**NESPRESSO**<sup>®</sup>




EN User manual

SLO Navodila za uporabo

3

---


EN Overview  
SLO Prikaz

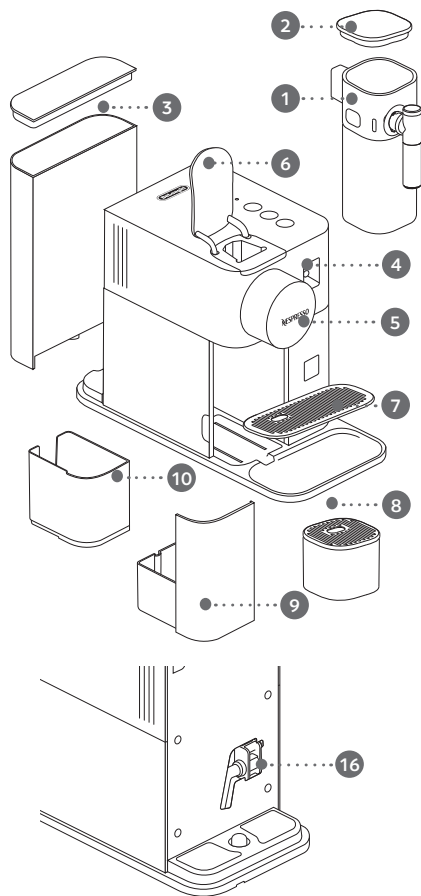

## Machine overview

### Prikaz aparata

- 1 Rapid Cappuccino system / Rapid Cappuccino system
- 2 Refill lid / Pokrov za polnjenje
- 3 Water tank (1 L) / Rezervoar za vodo (1L)
- 4 Rapid Cappuccino system connector / Konektor za Rapid Cappuccino System
- 5 Coffee outlet / Izhod za kavo
- 6 Lever / Ročka
- 7 Base grid / Mrežica
- 8 Cup support / Držalo za skodelico
- 9 Drip tray / Posoda za kapljanje
- 10 Used capsule container / Posoda za uporabljene kapsule
- 16 Descaling pipe / Cev za odstranjevanje vodnega kamna

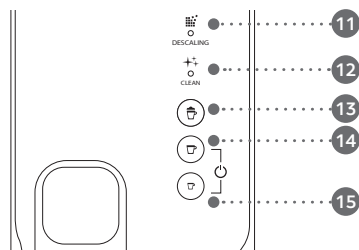

## Alerts

### Opozorila

- 11 DESCALING : descaling alert refer to section "Descaling"  
«ODSTRANJEVANJE VODNEGA KAMNA» : opozorilo za odstranjevanje vodnega kamna, preberite si poglavje »Odstranjevanje vodnega kamna«
- 12 CLEAN : milk system cleaning alert refer to section "Preparing Espresso Macchiato - Cappuccino - Latte Macchiato"  
«ČIŠČENJE» : opozorilo za čiščenje sistema za mleko, preberite si poglavje »Priprava Cappuccino - Latte Macchiato«


## Beverage buttons

### Gumbi za napitke

- 13 Milk drink (Espresso Macchiato, Cappuccino, Latte Macchiato)  
Napitek z mlekom (Cappuccino, Latte Macchiato)
- 14 Lungo 110 ml  
Lungo 110 ml
- 15 Espresso 40 ml  
Espresso 40 ml

# Specifications Specifikacije




## Lattissima One EN510/F121

 220-240 V~, 50-60 Hz, 1450 W

**P<sub>max</sub>** 19 barov / 1.9 MPa

 4.17 kg (neto teža) (poids net)

 ~1 L

 15.4 cm  
 25.6 cm  
 32.4 cm

# Content Vsebina

Overview / Prikaz	4
Specifications / Specifikacije	5
Safety Precautions	6
Varnostni ukrepi	9
Packaging Content / Vsebina pakiranja	13
First use / Prva uporaba	14
Setting water hardness / Nastavitev trdote vode	15
Coffee preparation / Priprava kave	16
Programming coffee quantity / Programiranje količine kave	17
Assembling/Disassembling the Rapid Cappuccino System / Sestavljanje/Razstavljanje Rapid Cappuccino Systema	17
Preparing Espresso Macchiato-Cappuccino-Latte Macchiato / Priprava Cappuccino - Latte Macchiato	18
Cleaning Rapid Cappuccino System / Čiščenje Rapid Cappuccino Systema	20
Power off / Izklop	21
Maintenance / Vzdrževanje	22
Descaling / Odstranjevanje vodnega kamna	23
Restoring quantity to default settings / Tovarniške nastavitve	25
Emptying the system before a period of non-use, for frost protection or before a transportation to be repaired / Praznjenje sistema pred obdobjem neuporabe	26
Troubleshooting	27
Reševanje problemov	28
Contact <b>Nespresso</b> / Obrnite se na <b>Nespresso</b> Klub	29
Disposal and Environmental Protection / Varstvo okolja in reciklaža	29

EN

SLO

## EN Safety Precautions



### CAUTION / WARNING



### ELECTRICAL DANGER



### DISCONNECT DAMAGED SUPPLY CORD

**⚠ CAUTION: WHEN YOU SEE THIS SIGN, PLEASE REFER TO THE SAFETY PRECAUTIONS TO AVOID POSSIBLE HARM AND DAMAGE.**

**⚠ CAUTION: THE SAFETY PRECAUTIONS ARE PART OF THE APPLIANCE. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING YOUR NEW APPLIANCE FOR THE FIRST TIME. KEEP THEM IN A PLACE WHERE YOU CAN FIND AND REFER TO THEM LATER ON.**

**i INFORMATION: WHEN YOU SEE THIS SIGN, PLEASE TAKE NOTE OF THE ADVICE FOR THE CORRECT AND SAFE USAGE OF YOUR APPLIANCE.**

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This is a household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- This appliance shall not be placed in a cabinet when in use.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- Children shall not use the device as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.
- If an extension cord is required: for voltage 230V, the conductor cross-section for an extension should be at least 1.0 mm<sup>2</sup>. For voltage 120V, the cross-section should be at least 1.5 mm<sup>2</sup>.



### Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.
- In case of plug incompatibility with the socket, use an adaptor

ensuring the ground continuity between the machine and the network.

### **The appliance must only be connected after installation.**

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord or the plug are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm<sup>2</sup> or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar liquids.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect,


stop any preparation, turn any control to "off", then remove plug from wall outlet.

- Never touch the cord and the plug with wet hands.
- To protect against fire, electric shock and injury to persons, do not immerse cord, or plugs, in water or other liquid.
- Never immerse the appliance in any liquid.
- Never put the appliance or part of it in a dishwasher, except the disassembled Rapid Cappuccino System, base grid, cup support, drip tray and used capsule container.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!
- The use of accessory attachments not recommended by the appliance manufacturer

may result in fire, electric shock or injury to persons.

- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.

### **Avoid possible harm when operating the appliance.**


- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged, has been dropped or not operating perfectly. Immediately remove the plug from the power socket. Contact **Nespresso** or **Nespresso** authorized representative for examination, repair or adjustment.
-  A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.

## EN Safety Precautions

- The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use an already used, damaged or deformed capsule.
- If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call **Nespresso** or **Nespresso** authorized representative.
- Always fill the water tank with cold, drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- The machine is not intended for use with raw milk.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean tools.
- When unpacking the machine, remove the protective film and dispose.
- This appliance is designed for **Nespresso** coffee capsules available exclusively through **Nespresso** or your **Nespresso** authorized representative.
- The cow milk beverages delivered by this equipment are not suitable for persons with milk or lactose intolerances and allergies, and for children under the age of 3.

- All **Nespresso** appliances pass stringent controls. Reliability tests under practical conditions are performed on randomly selected units. This can show traces of any previous use.
- **Nespresso** reserves the right to change instructions without prior notice.

### Descaling

- **Nespresso** descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day.
- Descale according to user manual recommendations, or consult the descaling information by visiting the **Nespresso** website [www.nespresso.com/machine-maintenance](http://www.nespresso.com/machine-maintenance).
-  CAUTION: the descaling

solution can be harmful. Avoid contact with eyes, skin and surfaces. The use of any unsuitable descaling agent may lead to machine component damage or an insufficient descaling process. For any additional questions you may have regarding descaling, please contact **Nespresso**.

### SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.

This instruction manual is also available as a PDF at [nespresso.com](http://nespresso.com).



**POZOR/  
OPOZORILO**



**NEVARNOST  
ELEKTRIČNEGA TOKA  
POŠKODOVAN KABEL  
ZA NAPAJANJE  
IZKLJUČITE IZ  
NAPAJANJA**



**⚠ POZOR: KO OPAZITE TA  
ZNAK, BODITE POZORNI  
NA PREVIDNOSTNE  
UKREPE, DA BI SE IZOGNILI  
MOREBITNIM TELESNIM  
POŠKODBAM IN OKVARAM.**

**⚠ POZOR: VARNOSTNI  
UKREPI SO DEL NAPRAVE.  
SKRBNO JIH PREBERITE  
PRED PRVO UPORABO  
SVOJE NOVE NAPRAVE.  
HRANITE JIH NA MESTU,  
KJER JIH POZNEJE LAHKO  
NAJDETE IN UPORABITE.**

**i INFORMACIJE: KO  
OPAZITE TA ZNAK, SI  
PREBERITE NAVODILA  
O PRAVLNI IN VARNI**

## **UPORABI SVOJE NAPRAVE ZA PRIPRAVO KAVE.**

- Ta naprava je namenjena za pripravo napitkov skladno s temi navodili.
- Naprave ne uporabljajte za kakršne koli druge namene, razen tiste, za katere je namenjena.
- Napravo zaščitite pred neposredno sončno svetlobo, daljšim polivanjem z vodo in vlago.
- Ta naprava je namenjena izključno za uporabo v gospodinjstvih. Ni namenjena za uporabo v kuhinjah za zaposlene v trgovinah, pisarnah in drugih delovnih okoljih; na farmah; s strani gostov v hotelih, motelih in drugih vrstah namestitve; v namestitvah za nočitev z zajtrkom.
- Ta naprava ne sme biti nameščena v omari, ko je v uporabi.

- Napravo lahko uporabljajo otroci, ki so stari 8 let ali več, le ob nadzoru in navodilih glede uporabe naprave na varen način in v primeru, da se popolnoma zavedajo možnih nevarnosti. Čiščenja in uporabniškega vzdrževanja ne smejo opravljati otroci, razen če so starejši od 8 let in pod nadzorom odrasle osebe.
- Zagotovite, da sta naprava in kabel izven dosega otrok mlajših od 8 let.
- Otroci se ne smejo igrati z napravo.
- Proizvajalec ne sprejema kakršne koli odgovornosti, garancija pa ne bo veljavna v primeru kakršne koli komercialne uporabe, neustrezne uporabe naprave, kakršne koli škode, ki je povzročena z uporabo za druge namene, nepravilno uporabo, nestrokovnimi popravili ali z

nespoštovanjem navodil.

- Če je potreben podaljšek: za napetost 230V, prečni prerez vodnika mora biti najmanj 1,0 mm<sup>2</sup>. Za napetost 120V, prečni prerez vodnika mora biti najmanj 1,5 mm<sup>2</sup>.



**Izognite se tveganju  
smrtonosnega  
električnega šoka in  
požara.**

- Izognite se tveganju smrtonosnega električnega šoka in požara.
- Napravo vključite izključno v ustrezno, ozemljeno vtičnico, ki je dostopna z lahkoto. Preverite, ali je napetost na viru napajanja enaka napetosti, ki je zapisana na ploščici z oznakami. Uporaba neustrezne vtičnice razveljavi garancijo.
- V primeru nezdržljivosti vtiča z vtičnico uporabite adapter.

## Ⓛⓞ Varnostni ukrepi

### **Napravo je treba priključiti šele po namestitvi.**

- Kabla ne vlecite preko ostrih robov, ne zvijajte ga in ne puščajte ga, da visi.
- Kabla ne postavljajte v bližino toplote in vlage.
- V primeru, da sta napajalni kabel ali vtičak poškodovana, ju mora zamenjati proizvajalec, njegov servisni agent ali podobno usposobljene osebe, z namenom izoginitve vsem tveganjem.
- V primeru, da sta kabel ali vtičak poškodovana, naprave ne uporabljajte. Napravo vrnite Nespresso Klubu ali pooblaščenemu predstavniku **Nespresso**-a.
- V primeru, da morate uporabiti podaljšek, uporabite le ozemljeni kabel s prečnim prerezom prevodnika najmanj 1,5 mm<sup>2</sup> ali z ustrezno vhodno močjo.

- Da bi se izognili nevarnosti, naprave nikoli ne postavljajte na vroče površine ali zraven njih (radiatorji, štedilniki, pečice, gorilniki, odprti plamen in podobno).
- Napravo vedno namestite na vodoravno, stabilno in ravno površino. Površina mora biti odporna proti toploti in tekočinam, kot so voda, kava, sredstva za čiščenje vodnega kamna in podobno.
- Izključite napravo iz električnega napajanja v primeru, da je ne boste uporabljali dlje časa. Napravo izključite z izvlekom vtičaka, ne pa kabla, ker na ta način lahko poškodujete kabel.
- Pred čiščenjem, servisiranjem ali ko naprava ni v uporabi vedno izključite napravo iz vtičnice in počakajte, da se naprava ohladi.
- Da bi napravo odklopili iz napajanja, prenehajte s kakršno koli pripravo in izklopite napravo. Potem pa izvlecite vtičak iz vtičnice.
- Kabla se nikoli ne dotikajte z vlažnimi rokami.
- Za zaščito pred požarom, električnim šokom in poškodbami oseb, ne potaplajte kabla ali vtiča v vodo ali druge tekočine.
- Nikoli ne potaplajte naprave v vodo ali drugo tekočino.
- Nikoli ne dajajte naprave ali katerega koli njenega dela v pomivalni stroj, razen razstavljenega Rapid Cappuccino System-a, mrežice, držala za skodelico, posode za kapljanje in posode za uporabljene kapsule.
- Električna in voda skupaj sta nevarni in lahko povzročita smrtonosni električni šok.
- Ne odpirajte naprave.


Nevarnost električnega toka v notranjosti naprave!

- Ne postavljajte česar koli v katero koli odprtino. To lahko povzroči požar ali električni udar!
- Proizvajalec ne priporoča uporabe dodatne opreme na napravi, ker lahko povzroči požar, električni udar ali poškodbe oseb, ki jo uporabljajo.
- Potreben je natančen nadzor kadar napravo uporablja otrok ali se uporablja v bližini otrok.
- Naprave ne uporabljajte na prostem.

### **Izognite se morebitnim poškodbam med delovanjem naprave.**

- Nikoli ne puščajte naprave brez nadzora med delovanjem.
- Ne uporabljajte naprave v primeru, da je poškodovana, če je padla ali če naprava

ne deluje, kot bi morala. Takoj izvlecite vtičač iz vtičnice. Obrnite se na **Nespresso** Klub ali pooblaščenega zastopnika **Nespresso**-a zaradi preizkusa, popravil ali prilagoditev.

-  Poškodovana naprava lahko povzroči električne udare, opekline in požar.
- Vedno do konca zaprite ročico in je nikoli ne dvigajte med delovanjem. Lahko pride do opeklin.
- Ne smete dajati prstov pod izhod za kavo, lahko pride do opeklin.
- Površina ogrevanega elementa naprave ostane vroča po uporabi in zunanja površina naprave lahko zadrži toploto nekaj minut, odvisno od uporabe.
- Ne smete dajati prstov v prostor za kapsulo ali odprtino za kapsulo.

Nevarnost poškodbe!

- V primeru, da kapsula ni perforirana s sekali, lahko pride do iztekanja vode okrog kapsule in do poškodbe naprave.
- Nikoli ne uporabljajte že rabljene, poškodovane ali deformirane kapsule.
- V primeru, da se je kapsula zataknila v prostoru za kapsulo, izklopite napravo in jo izključite iz napajanja pred kakršnim koli posegom. Pokličite **Nespresso** Klub ali pooblaščenega zastopnika **Nespresso**-a.
- Rezervoar za vodo vedno napolnite s hladno in svežo pitno vodo.
- Izpraznite rezervoar za vodo v primeru, da naprave ne boste uporabljali dlje časa (prazniki itn.).
- Zamenjajte vodo v rezervoarju v primeru, da niste uporabljali naprave

med vikendom ali podobnim časovnim obdobjem.

- Ne uporabljajte naprave brez posode za kapljanje in mrežice za kapljanje, da bi se izognili razlitju tekočine na okoliške površine.
- Naprava ni namenjena uporabi s surovim mlekom.
- Ne uporabljajte močnih sredstev ali topil za čiščenje. Uporabite vlažno krpo in blago sredstvo, da bi očistili površino naprave.
- Za čiščenje naprave uporabljajte le čiste pripomočke.
- Med odpakiranjem naprave odstranite plastično folijo in jo odvrzite.
- Ta naprava je zasnovana za Nespresso kapsule za kavo, ki so na voljo izključno preko **Nespresso** Kluba ali vašega pooblaščenega zastopnika **Nespresso**-a.
- Naprava je namenjena specifično za kravje mleko

in se ne sme uporabljati z drugimi alternativami (sojini, ovseni, mandljevi napitki), zato ni primerena za osebe z laktozno intoleranco ali alergijo na mleko. Napitki iz kravjega mleka pripravljene s to napravo niso primereni za otroke do starosti 3 leta.

- Vse **Nespresso** naprave so podvržene strogim kontrolam. Preizkusi zanesljivosti v praktičnih pogojih se opravljajo z naključno izbiro na izbranih enotah. To lahko pusti sledi kakršne koli predhodne uporabe naprave.
- **Nespresso** si pridružuje pravico do spremembe navodil brez predhodnega obvestila.

### Odstranjevanje vodnega kamna

- **Nespresso** sredstvo za odstranjevanje vodnega kamna, ko se pravilno

## Ⓢ Varnostni ukrepi

uporablja, pomaga pri pravilnem delovanju vaše naprave in ji podaljša življensko dobo, da bi vaša izkušnja priprave kave bila enako popolna kot prvi dan.

- Odstranite vodni kamen skladno s priporočilom iz navodila za uporabo.
- ⚠️ **POZOR:** Sredstvo za odstranjevanje vodnega kamna je lahko škodljivo. Izogibajte se stiku z očmi, kožo in površinami. Uporaba katerega koli neustreznega sredstva za odstranjevanje vodnega kamna lahko povzroči poškodbe delov naprave ali nezadostno odstranjevanje vodnega kamna. Za vsa dodatna vprašanja v zvezi z odstranjevanjem vodnega kamna vas prosimo, da se


obrnete na svoj Nespresso Klub.

### **SHRANITE TA NAVODILA.**


**Posredujte jih vsakemu naslednjemu uporabniku.**

# Packaging Content

## Vsebina pakiranja

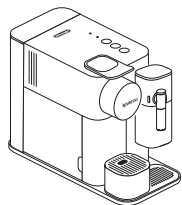

 - 1 Coffee machine  
Naprava za pripravo kave



- 2 User manual  
Navodilo za uporabo



- 3 Capsules set  
Set kapsul



- 4 "Welcome to Nespresso folder"  
Mapa »Dobrodošli v Nespresso«



- 5 1x water hardness test stick, in the user manual  
1 x test za preizkus trdote vode, v Navodilih za uporabo.

# Lattissima One

## Lattissima One

EN

SLO

### THE CLASSIC ESPRESSO EXPERIENCE

With the **Nespresso** Original system, you're invited to enjoy the essence of an espresso, with or without milk. Inspired by the Italian coffee tradition, it's a timeless experience at the touch of a button. The **Nespresso** Original machines and capsules offer an array of aromas to fit all coffee tastes. Espresso or lungo, black or in a recipe, always layered with a soft crema or an indulgent foam. This is only made possible thanks to the 19-bar pressure in every machine. It extracts the optimal flavours from each capsule, to reveal them in your cup. **Nespresso** Original, classic in its own way.

### KLASIČNA ESPRESSO IZKUŠNJA

S sistemom **Nespresso** Original ste vabljeni, da uživate v bistvu espressa, z mlekom ali brez njega. Navdihnjena z italijansko kavno tradicijo, je to brezčasna izkušnja s pritiskom na gumb. **Nespresso** Original aparati in kapsule ponujajo vrsto arom, ki ustrezajo vsakemu okusu. Espresso ali lungo, črna ali kot receptura z mlekom, kava je vedno prekrita z rahlim kremastim slojem ali gosto gladko peno. To je mogoče zahvaljujoč edinstvenemu sistemu za ekstrakcijo, ki zagotavlja tlak 19 barov. Izvleče optimalne okuse iz vsake kapsule, da jih razkrije v vaši skodelici. **Nespresso** Original, po svoje klasičen.

EN  
SLO


## First use

## Prva uporaba

**⚠ CAUTION:** first read the safety precautions to avoid risks of fatal electrical shock and fire.  
Please ensure ground continuity when plugging the machine in the power outlet.

**POZOR :** Naprej si preberite varnostne ukrepe, da bi se izognili tveganjem smrtonosnih električnih udarov in požara.

- 1** When unpacking the machine, remove the protective film, water tank, drip tray, and used capsule container. Adjust the cable length and store the excess in the cable guide under the machine. Remove the sticker on the grid. You can register your machine on [www.nespresso.com](http://www.nespresso.com).

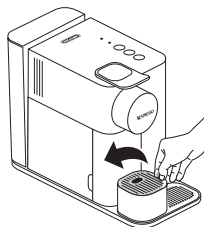

Med razpakiranjem naprave odstranite plastično folijo, rezervoar za vodo, posodo za kapljanje in posodo za kapsule. Prilagodite dolžino kabla, ostanek pa namestite v vodnik za kabel pod napravo. Odstranite nalepko na mreži. Napravo lahko registrirate na [www.nespresso.si](http://www.nespresso.si).

- 2** Plug machine into the mains. Rinse the water tank before filling with drinking water up to maximum level.


Izperite rezervoar preden ga napolnite s svežo pitno vodo do maksimalne ravni. Vključite v vtičnico.



- 3** Switch the machine on by pressing any buttons:
- Blinking lights: heating-up (18 sec)
  - Illuminates white: ready to use

Napravo vklopite s pritiskom na kateri koli izmed treh gumbov:

- Lučke utripajo: ogrevanje (18 sekund);
- Svetijo belo: pripravljeno za uporabo.

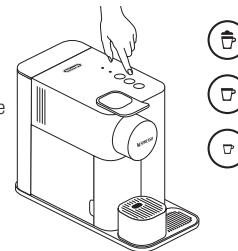


- 4** Rinse the machine by placing a 500 ml container under the coffee outlet and pressing the Lungo button. Repeat three times.

Izpiranje naprave: posodo (500 ml) namestite pod izhod za kavo in pritisnite gumb Lungo. Ponovite trikrat.


- i** Machines are fully tested after being produced. Some traces of coffee powder could be found in rinsing water.

Naprave v celoti preizkušamo po končani proizvodnji. Lahko se pojavijo sledi kave v prahu v vodi med izpiranjem.

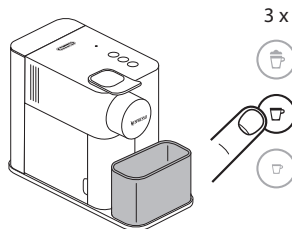

- 5** Clean the milk jug, refer to Cleaning Rapid Cappuccino System section.

Očistite sistem za mleko po navodilih za čiščenje v poglavju Rapid Cappuccino System.

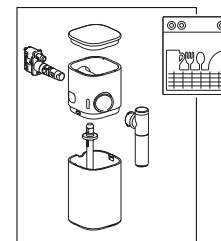

# Setting water hardness Nastavitev trdote vode

EN

 
SLO

- 1 Take water hardness sticker placed on the first page of the user manual and place it under water for 1 second.



Vzemite test za ugotavljanja trdote vode, ki se nahaja na prvi strani navodil in ga dajte pod vodo za 1 sekundo.


- 2 The number of red squares indicates the water hardness level.



Število rdečih kvadratkov pokaže raven trdote vode.

- 3 Remove milk jug and switch the machine on.

Odstranite sistem za mleko in vklopite napravo.

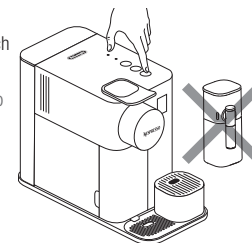

- 4 Press the milk drink button for 3 seconds to enter Menu mode: descaling and clean alerts start blinking.



Pritisnite gumb za mleko in zadržite 3 sekunde, da bi vstopili v način delovanja za nastavitve: opozorilni lučki za odstranjevanje vodnega kamna in čiščenje začneta utripati.

**NOTE:** the Menu mode exits automatically after 30 sec. if no actions are performed. It can be exited manually by pressing the milk drink button for 3 seconds.

**OPOMBA:** Naprava bo samodejno izklopila način delovanja za nastavitve po 30 sekundah neuporabe, ta način delovanja pa se lahko tudi ročno izklopi z držanjem gumba za napitek z mlekom 3 sekunde.

- 5 Pritisnite gumb Espresso.

Appuyez sur la touche Espresso.



- 6 Now, within 15 sec, you can set the desired value by pressing the corresponding button (see below table). They blink 3 times rapidly to confirm new value. The menu exits automatically and machine returns to ready mode.


Zdaj, v roku 15 sekund, lahko nastavite želeno vrednost s pritiskom na ustrezni gumb. Gumb bo trikrat hitro utripnil, da bi potrdil novo vrednost. Način delovanja za nastavitve se samodejno izklopi, naprava pa se vrne v način delovanja.

Level / Nivo	Button(s) / Gumbi	fH	dH	CaCO3
	Milk drink / Napitek z mlekom	< 5	< 3	< 50 mg/l
	Lungo	> 7	> 4	> 70 mg/l
	Espresso	> 13	> 7	> 130 mg/l
	Milk drink + Lungo / Napitek z mlekom + Lungo	> 25	> 14	> 250 mg/l
	Lungo + Espresso	> 38	> 21	> 380 mg/l

EN Coffee preparation  
SLO Priprava kave


- 1 Lift the lever completely and insert the capsule.

Dvignite ročico do konca in namestite kapsulo.

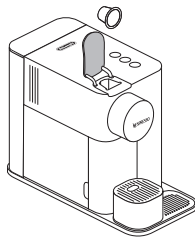

- 2 Close the lever and place a cup adapted to the desired beverage under the coffee outlet.

Zaprte ročico in namestite skodelico pod izhod za kavo.

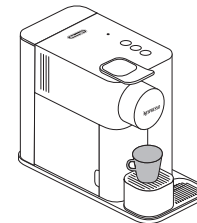

- 3 Press the Espresso (40 ml) or the Lungo (110 ml) button. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.

Pritisnite gumb Espresso (40 ml) ali Lungo (110 ml). Priprava se samodejno ustavi. Da bi ustavili iztekanje kave ali dopolnili kavo, pritisnite še enkrat.

**i NOTE:** during heat up, you can press any coffee button. You need to insert a capsule first then the coffee will flow automatically when the machine is ready.

**OPOMBA:** med segrevanjem lahko pritisnete kateri koli gumb za kavo. Ob vstavljeni kapsuli, bo kava samodejno stekla, ko bo aparat pripravljen.

110 ml →




40 ml →



- 4 Few seconds after the end of the preparation, lift and close the lever to eject the capsule into the used capsule container. Do not open the lever too early.

Nekaj sekund po pripravi kave dvignite in zaprite ročico, da bi se kapsula premestila v posodo za uporabljene kapsule. Pazite, da ročice ne dvignete prekmalu.

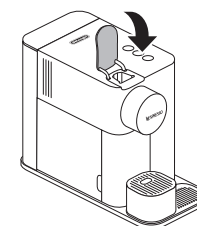

# Programming coffee quantity

## Programiranje količine kave

EN

SLO

**i NOTE:** We recommend you to keep factory settings for Espresso and Lungo to ensure the best in cup results for each of our coffee varieties.

**OPOMBA:** Priporočamo, da obdržite tovarniške nastavitve za Espresso in Lungo, da zagotovite najboljše rezultate za vsako od naših kav.

**1** Follow the step 1-2 of section "coffee preparation".

Sledite korakom 1-2 iz poglavja »Priprava kave«

**2** Touch and hold Espresso or Lungo button for at least 3 sec to enter the programming mode. Brewing starts and button blinks fast.

Pritisnite in zadržite gumb Espresso ali Lungo najmanj 3 sekunde, da bi vstopili v način za nastavitve. Priprava kave se bo začela in gumb bo hitro utripal.




**3** Release button when desired volume is reached. Coffee volume is now stored for the next coffee preparations. Button blinks 3 times to confirm the new coffee volume.

Spustite gumb, ko dosežete želeno količino. Količina kave je zdaj shranjena za naslednje priprave. Gumb bo trikrat utripnil, da bi potrdil novo količino kave.

Coffee quantity programmable / Nastavitev dolžine kave			
	Minimum	Prednastavljena	Maximum
Milk / Napitek z mlekom	-	40 ml	-
Lungo	70 ml	110 ml	150 ml
Espresso	20 ml	40 ml	70 ml

**i NOTE:** for milk recipes, coffee quantity cannot be programmed.

**OPOMBA:** za recepte z mlekom količine ni mogoče programirati.

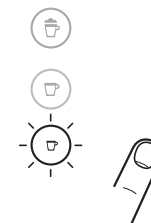


# Assembling / Disassembling the Rapid Cappuccino System

## Sestavljanje / Razstavljanje Rapid Cappuccino Systema


**1** Remove the milk container by pressing the button on the side of the milk jug. Unplug the aspiration tube.

Odstranite posodo za mleko s pritiskom gumba na bočni strani posode za mleko. Izvlecite cev za vsesavanje.

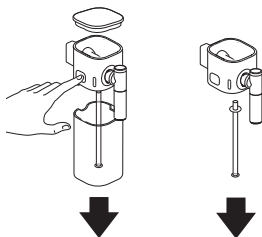


**2** Position the milk spout vertically to disassemble and to reassemble.

Šobo za mleko namestite v navpičen položaj, da bi le-to razstavili ali ponovno sestavili.

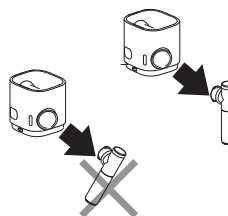

**3** Press the button on the side of milk jug and pull to unlock the connector.

Pritisnite gumb na bočni strani posode za mleko in povlecite, da bi odklenili konektor.

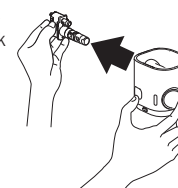

# EN Preparing Espresso Macchiato-Cappuccino-Latte Macchiato

## SLO Priprava Cappuccino-Latte Macchiato

- 1 Fill the milk container up to one of the 4 levels indicators (see figure).  
Place the lid and connect the Rapid Cappuccino System to the machine.


Rezervoar za mleko napolnite do enega izmed 4 indikatorjev ravni (glejte sliko):  
Zaprte rezervoar za mleko in povežite Rapid Cappuccino System z napravo.

- ⚠ **CAUTION:** The milk system has not been designed to work with vegetable beverages and does not work with water: use ONLY pasteurized/UHT cow milk. It is not suitable for use for persons suffering from cow milk intolerance or allergies.

**OPOZORILO :** Sistem za mleko ni predviden za uporabo rastlinskega mleka in ne deluje z vodo: uporabljajte SAMO pasterizirano kravje mleko. Ni primeren za uporabo za osebe z intoleranco ali alergijo na kravje mleko.


- i** The machine will use all milk quantity in the milk jug and will stop automatically when empty.  
For a perfect milk froth, use skimmed or semi-skimmed cow milk at refrigerator temperature (about 4° C). The milk froth volume depends on the kind of milk that is used and its temperature.

Naprava bo porabila vso količino mleka v posodi za mleko in se bo samodejno ustavila, ko bo prazna. Za popolno mlečno peno uporabite hladno posneto ali polposneto kravje mleko (približno 4 ° C). Količina mlečne pene je odvisna od vrste uporabljenega mleka in njegove temperature.

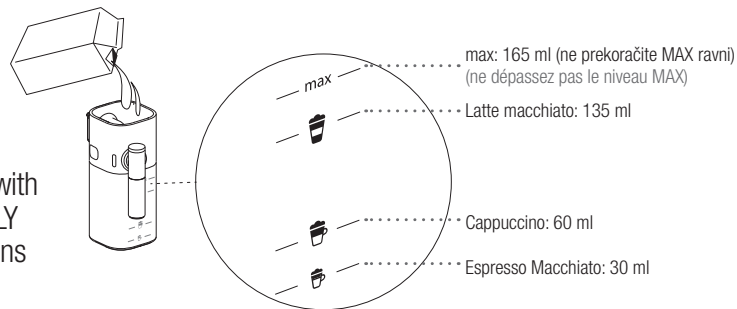


- 2 Lift the lever completely and insert the capsule.  
Close the lever.

Dvignite ročico do konca in namestite kapsulo. Zaprite ročico.

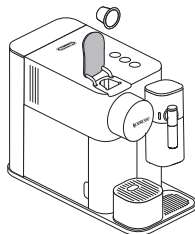

- 3 Place a cup adapted to the quantity of milk you poured under the coffee outlet and adjust milk spout position by lifting it up to the right level.  
Namestite skodelico za cappuccino ali kozarec za latte macchiato pod izhod za kavo in nastavite položaj šobe za mleko tako, da jo boste dvignili na ustrezno raven.

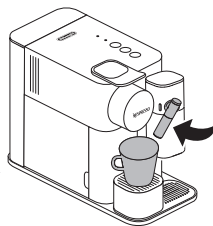


- 4 Press the milk button.


Pritisnite gumb za napitek z mlekom.


- i** The preparation starts after approximately 15 seconds blinking lights (first milk and then coffee).

Priprava se začne po približno 15 sekundah utripanja lučk (najprej mleko in nato kava).




- 5 At the end of the preparation, the clean alert  blinks orange to indicate it is advisable to clean the Rapid Cappuccino System. It is necessary to clean if not more beverage are required.

Na koncu priprave bo opozorilo za čiščenje  zasvetilo oranžno, kar nakazuje na to, da je potrebno očistiti Rapid Cappuccino System.

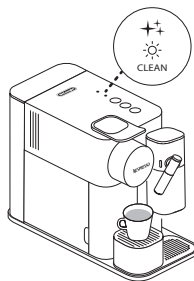


- 6 Lift and close the lever to eject the capsule into the used capsule container.

Dvignite in zaprite ročico, da bi se kapsula premestila v posodo za uporabljene kapsule.

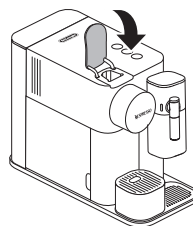


- 7 To prepare a second beverage, remove the milk container lid and fill the milk container up. Do not exceed the MAX level. Repeat operations 1 to 6.

Za pripravo naslednje pijače odstranite pokrov posode za mleko in jo napolnite z mlekom. Ne prekoračite MAX ravni. Ponovite postopke od 1 do 6.


-  Be careful: When pouring the milk into the milk container pay attention it does not spill out of it. If necessary, clean well with a cloth. Do not place the milk pack on the milk container because the container could unhook from the machine.


Bodite previdni: Ko točite mleko v posodo za mleko bodite pozorni, da se ne polije. Po potrebi dobro očistite s krpo. Embalaže za mleko ne odlagajte na posodo za mleko, ker bi se lahko snela iz naprave.

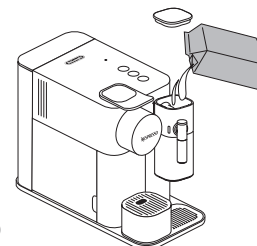

- 8 After a period of non use of maximum 30 minutes after your milk recipe preparation, disassemble the milk jug refer to section "Assembling/Disassembling of Rapid Cappuccino System", and clean all 6 dismantled components in dishwasher or hand wash refer to section "Cleaning Rapid Cappuccino System".

Po obdobju neuporabe v trajanju maksimalno 30 minut po pripravi napitka z mlekom razstavite Rapid Cappuccino System in operite vseh 6 komponent v pomivalnem stroju ali operite ročno po navodilih iz poglavja »Čiščenje Rapid Cappuccino Systema«.

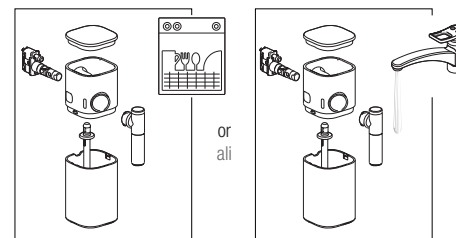

-  The number of consecutive milk beverages should not exceed 5. We recommend cleaning the Rapid Cappuccino System between each milk preparation.

Število zaporednih mlečnih pripravkov ne sme presežati 5. Priporočamo čiščenje Rapid Cappuccino Systema med vsako pripravo napitka z mlekom.

#### Clean alert / Opozorilo za čiščenje



Blinks orange  
Utripa oranžno

It is advisable to clean; you can still prepare some other beverages.  
Priporočljivo je očistiti; še vedno lahko pripravite nekaj napitkov.



Illuminates orange  
Sveti oranžno

It is necessary to clean; the machine stops and it is not possible to prepare any beverages.  
Potrebno je očistiti; naprava se je ustavila in napitkov ni mogoče pripraviti.

EN  
SLO

# Cleaning Rapid Cappuccino System


## Čiščenje Rapid Cappuccino Systema

Disassemble the milk jug. Refer to section "Assembling/Disassembling of Rapid Cappuccino System".  
Rinse away carefully any milk residue with hot drinking water.

Razstavite posodo za mleko. Glejte poglavje "Sestavljanje/Razstavljanje Rapid Cappuccino Systema".  
Vse ostanke mleka previdno sperite s toplo pitno vodo.

**i** When a dishwasher is not available, the Rapid Cappuccino System components can be hand washed. The cleaning procedure must be performed after each use.


Ko pomivalni stroj ni na voljo, Rapid Cappuccino System komponente lahko ročno operete. Čiščenje je potrebno po vsaki uporabi.

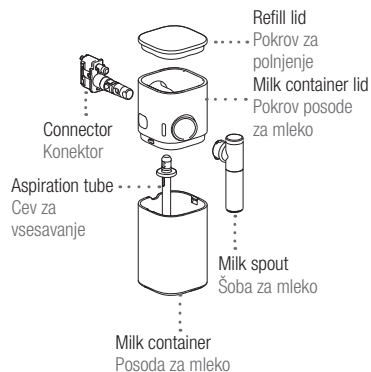

### DISHWASHER: POMIVALNI STROJ:


**1** Put the six dismantled components in the upper tray of your dishwasher and run a program at high temperature (50°/60°C).

Vstavite šest razstavljenih komponent na zgornji predel pomivalnega stroja in zaženite program pri visoki temperaturi (50°/60° C).

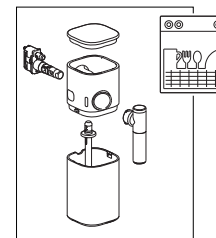

### HAND WASH: ROČNO PRANJE:


**1** Soak all components in with hot drinking water (min. 40°C) together with mild/soft detergent for at least 30 minutes and rinse thoroughly with hot drinking water.

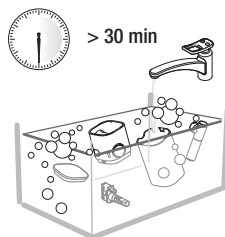

Potopite vse komponente v vročo pitno vodo skupaj z blagim detergentom za najmanj 30 minut in temeljito izperite z vročo pitno vodo.


**2** Clean the interior of the milk tank with mild/soft detergent and rinse with hot drinking water. Do not use abrasive material that might damage the surface of the equipment.

Očistite notranjost posode za mleko z blagim detergentom in izperite z vročo pitno vodo. Ne uporabljajte abrazivnih materialov, ki bi lahko poškodovali površino opreme.

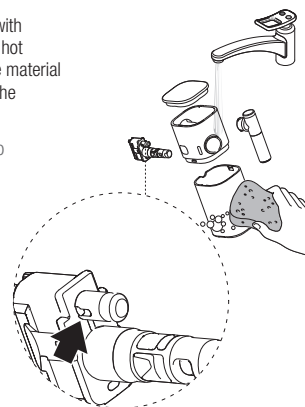

**3** Dry all parts with a clean towel, cloth or paper and reassemble.

Osušite vse dele s čisto brisačo, krpo ali papirnato brisačo in ponovno sestavite vse dele.

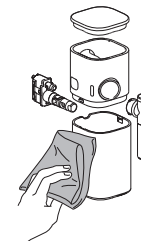

# Power off Izklop

EN

SLO

## MANUAL POWER OFF: ROČNI IZKLOP:

- 1 To turn off the machine press simultaneously the Espresso and Lungo buttons. A 'click' sound indicates that the machine is now off.


Za izklop naprave hkrati pritisnite gumba Espresso in Lungo. Zvok "klik" pomeni, da je naprava zdaj izklopljena.



## AUTOMATIC POWER OFF: SAMODEJNI IZKLOP:

- 1 It is possible to program the automatic power off time: Remove milk jug and switch the machine on.

Možno je programirati čas samodejnega izklopa: odstranite posodo za mleko in vklopite napravo.

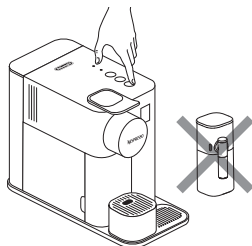


- 2 Press the milk button for 3 seconds to enter Menu mode: the descaling and clean alerts start blinking.

Držite gumb za napitek z mlekom 3 sekunde, da vstopite v način za nastavitve: opozorilni lučki za odstranjevanje vodnega kamna in čiščenje začneta utripati.

- i** NOTE: the Menu mode exits automatically after 30 sec. If no actions are performed. It can be exited manually by pressing the milk button for 3 seconds.

**OPOMBA:** način za nastavitve se samodejno izklopi po 30 sekundah neuporabe. Lahko ga izklopite ročno z držanjem gumba za napitek z mlekom 3 sekunde.

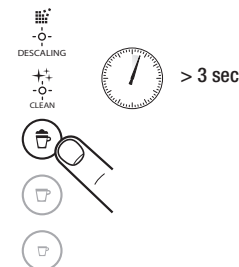

- 3 Press Lungo button to enter the Power Off Menu. Clean & descaling alerts indicators turn off. One of the recipe button is blinking, indicating what is the current setting (ref to table aside).

Pritisnite gumb Lungo, da vstopite v način delovanja za nastavitve izklopa. Opozorilni lučki za odstranjevanje vodnega kamna in čiščenje se ugasneta. Eden od gumbov za recepture utripa, kar kaže na trenutno nastavitve (kot v tabeli desno).



- 4 Now, within 15 seconds, you can set the desired value by pressing the corresponding button. They blink 3 times rapidly to confirm new value. The menu exits automatically and machine returns to ready mode.

Zdaj, v roku 15 sekund, lahko nastavite želeno vrednost s pritiskom ustreznega gumba. Utripajo 3-krat hitro za potrditev nove vrednosti. Način delovanja za nastavitve izklopa se samodejno zapre in naprava se vrne v način pripravljenosti.

### Automatic power off setting / Nastavitve samodejnega izklopa

Milk / Napitek z mlekom	➔	2 minutes / minuti
Lungo	➔	9 minutes / minut
Espresso	➔	30 minutes / minut


EN Maintenance  
SLO Vzdrževanje

- i** Do not use any strong cleaning agent or solvent cleaner. Use a clean damp cloth and mild cleaning agent to clean the surface of the machine.

Ne uporabljajte močnih sredstev ali topil za čiščenje. Uporabite vlažno krpo in blago sredstvo, da bi očistili površino naprave.


- 1** Lift and close the lever to eject the capsule into the used capsule container. Remove drip tray and capsule container. Empty and rinse. Remove water tank. Empty, rinse it before filling with drinking water. Clean cup support and grid. Lift the removable grid and clean.

Dvignite in zaprite ročico, da bi se kapsula premestila v posodo za uporabljene kapsule. Odstranite posodo za kapljanje in posodo za kapsule. Izpraznite in izperite. Odstranite rezervoar za vodo. Izpraznite rezervoar in ga izperite preden ga napolnite s svežo pitno vodo. Očistite podstavek za skodelico in mrežico. Dvignite spodnjo mrežico in očistite.

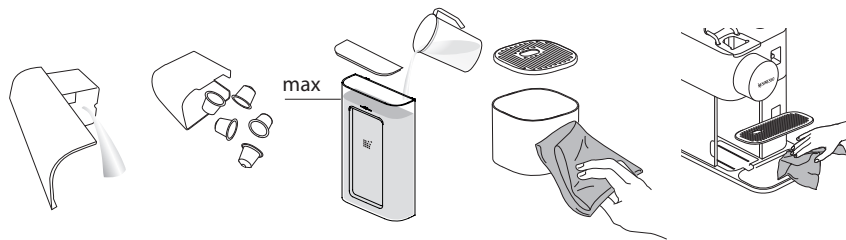


- 2** Place a container under coffee outlet and press the Lungo button to rinse.

Namestite posodo pod izhod za kavo in pritisnite gumb Lungo, da bi izprali rezervoar.

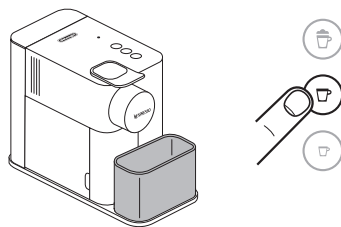


- 3** Clean the coffee outlet and machine surface with a clean damp cloth.


Očistite izhod za kavo in površino naprave z vlažno krpo.

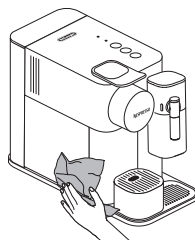

- i** Not dishwasher safe.  
Ni primerno za pranje v pomivalnem stroju.

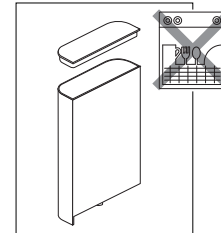

- i** Dishwasher safe.  
Primerno za pranje v pomivalnem stroju.

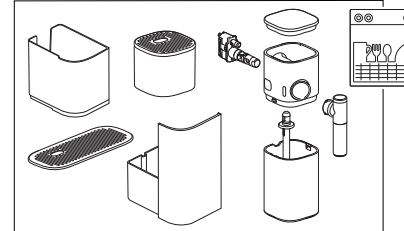

# Descaling

## Čiščenje vodnega kamna

www.nespresso.com/descaling




EN

SLO

**⚠ CAUTION:** refer to safety precautions. **OPOZORILO :** upoštevajte varnostne ukrepe.

**i NOTE:** to ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day, follow the below process. Descaling time is approximately 20 minutes. To ensure a perfect coffee experience after time and a good functioning of the machine this is important to descale your machine when needed. When the descaling alert starts to blink, it is time to descale your machine. The machine can still prepare several milk beverages before it is blocked preventively. The blockage prevents any damages to the machine and ensure its proper functioning over its lifetime. In case the machine is blocked, please descale your machine or contact the **Nespresso** club. Please make sure to complete the entire descaling procedure. If it is not completed, the machine will remain blocked.

**OPOMBA :** Z namenom zagotavljanja pravilnega delovanja vaše naprave med njeno življenjsko dobo, ter da bi vaša izkušnja uživanja v kavi bila enako popolna kot prvi dan, upoštevajte postopek, ki je naveden spodaj. Čas postopka je približno 20 minut. Ko opozorilna lučka za začne utripati, je čas za čiščenje vodnega kamna. Naprava še vedno omogoča pripravo nekaj napitkov z mlekom preden se preventivno zaklene. To preprečuje poškodbe in omogoča pravilno delovanje naprave. V primeru zaklepa naprave, naredite čiščenje vodnega kamna ali pokličite **Nespresso** Klub. Pripravite se, da je postopek odstranjevanja vodnega kamna v celoti zaključen. V primeru, da ni zaključen, bo naprava ostala zaklenjena.

DESCALING alert / Opozorila za čiščenje vodnega kamna		
 DESCALING	Blinks orange Utripa oranžno	It is advisable to descale. Priporočljivo je čiščenje vodnega kamna.
 DESCALING	Fast blinking orange Hitro utripa oranžno	Only few preparations can be made before the machine is blocked. Naprava še vedno omogoča pripravo nekaj mlečnih napitkov preden se preventivno zaklene.
 DESCALING	illuminates orange Sveti oranžno	It is necessary to descale; the machine stops and it is not possible to prepare any beverages. Potrebno je čiščenje vodnega kamna; naprava se je zaklenila in priprava napitkov ni mogoča.


**1** Descale the machine when descaling alert blinks orange in ready mode.

Očistite vodni kamen iz naprave, ko opozorilna lučka za odstranjevanje vodnega kamna zasveti oranžno v načinu pripravljenosti.




**2** Lift and close the lever to eject any capsules in the used capsule container.

Dvignite in zaprite ročico, da bi se kapsula premestila v posodo za uporabljene kapsule.

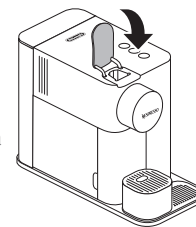

**3** Empty the drip tray and the used capsule container. Fill the water tank with 100 ml of **Nespresso** descaling agent (1 pouch). Add water up to the descaling mark on the water tank (~500 ml).


Izpraznite posodo za uporabljene kapsule. Napolnite rezervoar za vodo z 100ml sredstva za descaling. Dodajte vodo do descaling oznake (500 ml).

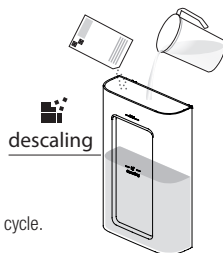

**i NOTE:** Respect quantity to ensure completion of the cycle.  
**OPOMBA :** Upoštevajte količino, da zagotovite zaključek cikla.

**4** Take the descaling pipe situated at the back of the machine and plug it into the Rapid Cappuccino System Connector of machine.

Vzemite cev za čiščenje vodnega kamna na zadnji strani naprave in jo priključite na Rapid Cappuccino System konektor naprave.

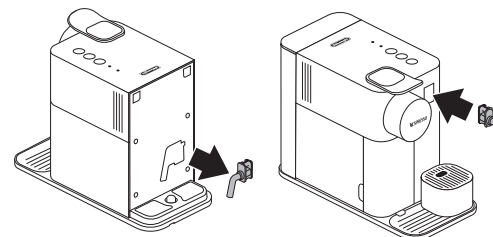


- 5** The machine enters the descaling mode. The descaling alert blinks orange during the entire descaling process. The Espresso button illuminates white.

Naprava bo vstopila v način delovanja za čiščenje vodnega kamna. Opozorilna lučka za čiščenje vodnega kamna utripa oranžno med celotnim postopkom. Gumb Espresso sveti belo.



- 6** Place a container with a minimum 1 litre capacity under both the coffee outlet and under the descaling pipe.

Posodo s prostornino najmanj 1 L namestite pod izhod za kavo in pod odprtino na cevi za čiščenje vodnega kamna.

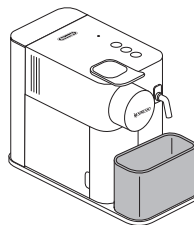

- 7** Press the Espresso button. Descaling product flows alternately through the coffee outlet, descaling pipe and drip tray. When the descaling cycle is finished (water tank runs empty), the Lungo button illuminates white.

Pritisnite gumb Espresso. Pripravek za čiščenje vodnega kamna bo izmenično iztekal skozi izhod za kavo, cev za čiščenje vodnega kamna in posodo za kapljanje. Ko je ciklus čiščenja vodnega kamna končan (ko se rezervoar za vodo izprazni), zasveti gumb Espresso.




- 8** Empty the used capsules container, drip tray recipient and 1 litre container, rinse out and fill the water tank with fresh drinking water up to level MAX.

Izpraznite posodo za uporabljene kapsule, posodo za kapljanje, in nameščeno posodo, izperite in napolnite rezervoar za vodo s svežo pitno vodo do ravni Max.

**i** **NOTE:** Respect quantity to ensure completion of the cycle.

**OPOMBA :** Upošteвайте količino, da zagotovite zaključek cikla.

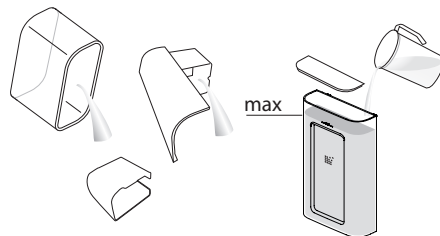


- 9** Press the Lungo button. The rinsing cycle continues through the coffee outlet, descaling pipe and drip tray until the water tank turns empty. During this phase the Lungo button blinks.

Pritisnite gumb Lungo. Ciklus izpiranja bo šel skozi izhod za kavo, cev za odstranjevanje vodnega kamna in posodo za kapljanje, dokler se rezervoar za vodo ne izprazni. Lungo gumb utripa med celotnim procesom.




- 10** Once the rinsing process is finished, the machine switch off. Remove and store descaling pipe. Empty drip tray and used capsule container. Rinse water tank and fill with drinking water.

Ko je postopek izpiranja končan, se naprava izklopi. Odstranite in pospravite cev za čiščenje vodnega kamna. Izpraznite posodo za kapljanje in posodo z uporabljenimi kapsulami. Napolnite rezervoar za vodo s svežo pitno vodo.

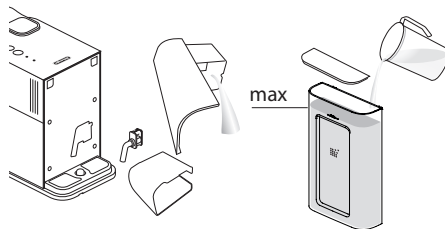

- 11** Clean the machine using a damp cloth. You have now finished descaling the machine.

Napravo obrišite z vlažno krpo. Zdaj ste zaključili čiščenje vodnega kamna iz naprave.

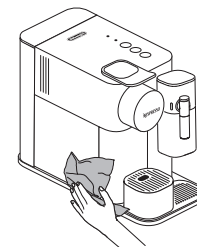

# Restoring quantity to default settings


## Tovarniške nastavitve

**i NOTE:** This procedure resets coffee volumes & power off timing to the default values.

**OPOMBA :** Ta postopek ponastavi količino kave in čas izklopa na tovarniške nastavitve.

- 1 Remove the milk jug and switch the machine on.

Odstranite posodo za mleko in vklopite napravo.

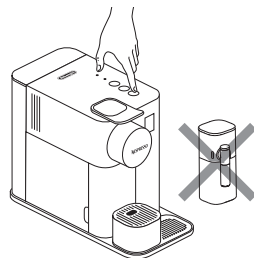


- 2 Press the milk drink button for 3 seconds to enter Menu mode: descaling and clean alert start blinking.

Držite gumb za napitek z mlekom 3 sekunde da vstopite v način delovanja za nastavitve: opozorilni lučki za odstranjevanje vodnega kamna in čiščenje začneta utripati.

**i NOTE:** the Menu mode exits automatically after 30 sec if no actions are performed or can be exited manually by pressing the milk button 3 seconds.

**OPOMBA :** način delovanja za nastavitve se samodejno izklopi po 30 sekundah neuporabe. Lahko ga izklopite ročno z držanjem gumba za napitek z mlekom 3 sekunde.

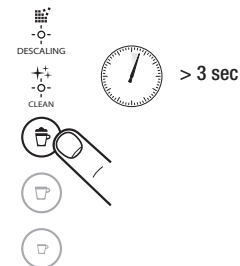

- 3 Press the milk button. The milk button blinks to indicate reset mode. Press it to confirm. All buttons blink 3 times: all volumes are reset to default settings. The menu exits automatically and machine returns to ready mode.

Pritisnite gumb za napitek z mlekom. Gumb za mleko utripa in označuje način ponastavitve. Pritisnite ga za potrditev. Vsi gumbi utripajo 3-krat: vse funkcije so ponastavljene na tovarniške nastavitve. Način delovanja za nastavitve se samodejno zapre in naprava se vrne v način pripravljenosti.




### DEFAULT VALUES: PREDNASTAVLJENE VREDNOSTI:

 Milk drink (from 30 to 165 ml corresponding to level  Espresso Macchiato and MAX level on the milk container) + Coffee 40 ml  
 Napitek z mlekom (od 30 do 165 ml, kar ustreza ravni  Espresso Macchiato in MAX ravni na posodi za mleko) + Kava 40 ml

 Lungo: 110 ml  
 Lungo : 110 ml


 Espresso: 40 ml  
 Espresso : 40 ml

 Automatic power off: 2 minutes  
 Samodejni izklop : 2 minuti

(EN) Emptying the system before a period of non-use, for frost protection  
(SLO) Praznjenje sistema pred obdobjem neuporabe ali pred transportom na popravilo


- 1 Remove the milk jug and switch the machine on.

Odstranite posodo za mleko in vklopite napravo.

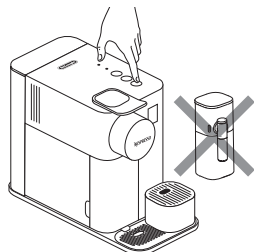

- 2 Remove the water tank. Lift and close the lever to eject any remaining capsule. Place a container under the coffee outlet.

Odstranite rezervoar za vodo. Dvignite in zaprite ročico, da bi odvrgli uporabljene kapsule. Posodo namestite pod izhod za kavo.

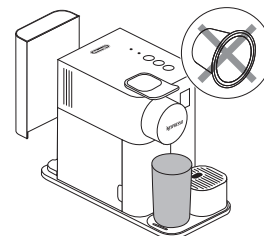

- 3 Press the milk drink button for 3 seconds to enter Menu mode: the descaling and clean alerts start blinking.

Držite gumb za napitek z mlekom 3 sekunde, da bi vstopili v način delovanja za nastavitve: opozorili za odstranjevanje vodnega kamna in čiščenje začeta utripati.

 
**i NOTE:** the Menu mode exits automatically after 30 sec. If no actions are performed. It can be exited manually by pressing the milk button for 3 seconds.

**OPOMBA:** Naprava bo samodejno izklopila način delovanja za nastavitve po 30 sekundah neuporabe, ta način delovanja pa se lahko tudi ročno izklopi z držanjem gumba za napitek z mlekom v trajanju 3 sekund.



- 4 Press milk drink and Lungo buttons simultaneously.

Istočasno pritisnite gumba za napitek z mlekom in Lungo.



- 5 The milk drink button blinks to confirm that machine is ready. Once pressed, the emptying starts. The coffee buttons blink alternatively: emptying mode in progress. When the process is finished, the machine switches off automatically.

Gumb za napitek z mlekom bo utripnil v znak potrdila. Potem, ko pritisnete ta gumb, se začne postopek praznjenja. Gumbi za kavo bodo izmenično utripali: način delovanja za praznjenje je v teku. Po končanem postopku se naprava samodejno izklopi.



- i NOTE:** appliance will be blocked for approximately 10 minutes after emptying.

**OPOMBA:** Naprava bo blokirana približno 10 minut po praznjenju.

**⚠ ATTENTION:** Storing the machine in a cold environment, might cause damages by frost to the water circuit and create leakages.

**⚠ POZOR:** Hranjenje naprave v hladnem okolju lahko povzroči poškodbe naprave zaradi zmrzali in povzroči puščanje.

# Troubleshooting

<b>No light indicator.</b>	<ul style="list-style-type: none"><li>- Check the mains, plug, voltage, and fuse. In case of problems, call the <i>Nespresso Club</i>.</li></ul>
<b>No coffee, no water.</b>	<ul style="list-style-type: none"><li>- Water tank is empty. Fill water tank.</li><li>- Descale if necessary; see Descaling section.</li></ul>
<b>Coffee comes out very slowly.</b>	<ul style="list-style-type: none"><li>- Flow speed depends on the coffee variety.</li><li>- Descale if necessary; see Descaling section.</li></ul>
<b>No coffee, just water runs out (despite inserted capsule).</b>	<ul style="list-style-type: none"><li>- Make sure the capsule is not pinched in a wrong position.</li><li>- Make sure the capsule is not damaged.</li><li>- Call <i>Nespresso Club</i> or send appliance to repair.</li></ul>
<b>Coffee is not hot enough.</b>	<ul style="list-style-type: none"><li>- Preheat cup.</li><li>- Descale if necessary; see Descaling section.</li></ul>
<b>Capsule area is leaking (water in capsule container).</b>	<ul style="list-style-type: none"><li>- Position capsule correctly. If leakages occur, call the <i>Nespresso Club</i>.</li></ul>
<b>Any other blinking behavior not described in the troubleshooting.</b>	<ul style="list-style-type: none"><li>- Send appliance to repair or call the <i>Nespresso Club</i>.</li></ul>
<b>All buttons blink simultaneously for 10 seconds and then machine switches off automatically.</b>	<ul style="list-style-type: none"><li>- Error alarm, machine needs repair. Send appliance to repair or call the <i>Nespresso Club</i>.</li></ul>
<b>All 3 buttons blinking fast 3 times and then machine goes back in ready mode.</b>	<ul style="list-style-type: none"><li>- Water tank is empty.</li></ul>
<b>Descaling and cleaning alert blink.</b>	<ul style="list-style-type: none"><li>- Machine is in menu mode, press milk button for 3 seconds to exit menu mode or wait 30 seconds to exit automatically.</li></ul>
<b>Descaling alert blinks orange.</b>	<ul style="list-style-type: none"><li>- Machine triggers descaling alert according beverages consumption usage. Descale machine.</li></ul>
<b>Descaling alert blinks orange and Espresso button illuminates white.</b>	<ul style="list-style-type: none"><li>- Machine is in descaling mode. Press Espresso button to start descaling process.</li></ul>
<b>Descaling alert illuminates orange, beverage buttons are unavailable.</b>	<ul style="list-style-type: none"><li>- Machine blocked due to scale level too high. Descale machine.</li></ul>
<b>All coffee buttons and all milk recipe buttons flash alternatively.</b>	<ul style="list-style-type: none"><li>- Machine in overheat protection mode, wait until it returns to ready mode.</li><li>- Appliance will be blocked for approximately 10 minutes after emptying.</li></ul>
<b>Lever cannot be closed completely.</b>	<ul style="list-style-type: none"><li>- Empty capsule container. Make sure that no capsule is blocked inside the capsule container.</li></ul>
<b>Quality of Milk froth is not up to standard.</b>	<ul style="list-style-type: none"><li>- Use skimmed or semi-skimmed cow milk at refrigerator temperature (about 4° C).</li><li>- Rinse after each milk preparation (see section "Hand Washing of Rapid Cappuccino System").</li><li>- Descale the machine.</li><li>- Do not use frozen milk.</li><li>- Ensure the air aspiration part is clean. Refer to the section "Hand washing of Rapid Cappuccino System".</li></ul>
<b>I cannot enter Menu mode.</b>	<ul style="list-style-type: none"><li>- Be sure to remove the milk jug.</li><li>- Be sure to press milk button for 3 seconds.</li><li>- Remove descaling pipe.</li><li>- Is not possible to enter Menu mode while machine is heating up.</li></ul>
<b>Milk dispensing doesn't start (clean alert illuminates orange).</b>	<ul style="list-style-type: none"><li>- Prepared more than 5 milk dispensing without any cleaning. Action: clean Rapid Cappuccino System.</li><li>- Overtime milk preparation. Action: clean Rapid Cappuccino System.</li><li>- Over 30 min from last milk preparation. Action: clean Rapid Cappuccino System.</li></ul>
<b>Milk jug cannot be dismantled.</b>	<ul style="list-style-type: none"><li>- Press the button on the side of the milk jug to remove the parts.</li><li>- Refer to section "Assembling / Disassembling of Rapid Cappuccino System".</li></ul>
<b>Sound when machine switches off.</b>	<ul style="list-style-type: none"><li>- This sound indicates that the machine is now off.</li></ul>
<b>In the event of accidental milk spillage, unplug the machine.</b>	<ul style="list-style-type: none"><li>- Immediately clean thoroughly the machine.</li></ul>

## (SLO) Reševanje problemov

<b>Opozorilo za odstranjevanje vodnega kamna utripa oranžno, gumb Espresso pa sveti brez prekinitve.</b>	<ul style="list-style-type: none"><li>- Preverite vtičnico, vtičač, napetost in varovalko. V primeru težav pokličite Nespresso Klub.</li></ul>
<b>Ni kave, ni vode.</b>	<ul style="list-style-type: none"><li>- Rezervoar za vodo je prazen. Napolnite rezervoar za vodo.</li><li>- Naredite čiščenje vodnega kamna, če je potrebno.</li></ul>
<b>Kava izteka prepočasi.</b>	<ul style="list-style-type: none"><li>- Hitrost izteka je odvisna od vrste kave.</li><li>- Naredite čiščenje vodnega kamna če je potrebno.</li></ul>
<b>Ni kave, izteka le voda (čeprav je kapsula nameščena).</b>	<ul style="list-style-type: none"><li>- Prepričajte se, da je kapsula pravilno nameščena.</li><li>- Prepričajte se, da kapsula ni poškodovana.</li><li>- V primeru težav napravo pošljite na popravilo ali pokličite Nespresso Klub.</li></ul>
<b>Kava ni dovolj vroča.</b>	<ul style="list-style-type: none"><li>- Ogrejte skodelico.</li><li>- Naredite čiščenje vodnega kamna, če je potrebno.</li></ul>
<b>Opazili ste iztekanje iz prostora s kapsulo (voda v posodi s kapsul).</b>	<ul style="list-style-type: none"><li>- Pravilno namestite kapsulo. V primeru iztekanja pokličite <i>Nespresso Klub</i>.</li></ul>
<b>Nepravilno utripanje.</b>	<ul style="list-style-type: none"><li>- Napravo pošljite na popravilo ali pokličite Nespresso Klub.</li></ul>
<b>Vsi gumbi istočasno utripajo 10 sekund, zatem pa se naprava samodejno izklopi</b>	<ul style="list-style-type: none"><li>- To je alarm za napako, potrebno je popravilo naprave. Napravo pošljite na popravilo ali pokličite Nespresso Klub.</li></ul>
<b>Vsi trije gumbi utripnejo hitro trikrat, naprava pa se zatem vrne v način pripravljenosti.</b>	<ul style="list-style-type: none"><li>- Rezervoar za vodo je prazen.</li></ul>
<b>Opozorili za odstranjevanje vodnega kamna in čiščenje utripata.</b>	<ul style="list-style-type: none"><li>- Naprava je v načinu delovanja za nastavitve, držite gumb za napitek z mlekom 3 sekunde, da bi zapustili način delovanja za nastavitve ali počakajte 30 sekund, da bi naprava samodejno zapustila ta način delovanja.</li></ul>
<b>Opozorilo za odstranjevanje vodnega kamna utripa oranžno.</b>	<ul style="list-style-type: none"><li>- Naprava bo pokazala opozorilo za čiščenje vodnega kamna skladno z uporabo. Očistite vodni kamen iz naprave.</li></ul>
<b>Opozorilo za odstranjevanje vodnega kamna utripa oranžno, gumb Espresso pa sveti brez prekinitve.</b>	<ul style="list-style-type: none"><li>- Naprava je v načinu delovanja za odstranjevanja vodnega kamna. Pritisnite gumb Espresso, da bi sprožili postopek odstranjevanja vodnega kamna.</li></ul>
<b>Opozorilo za odstranjevanje vodnega kamna sveti oranžno, gumbi za napitke pa so onemogočeni.</b>	<ul style="list-style-type: none"><li>- Naprava se je zaklenila. Naredite čiščenje vodnega kamna.</li></ul>
<b>Vsi gumbi za kavo in gumbi za napitke z mlekom utripajo izmenično.</b>	<ul style="list-style-type: none"><li>- Naprava je pregreta, počakajte, da se shladi.</li><li>- Naprava bo varnostno blokirana približno 10 minut po praznjenju.</li></ul>
<b>Ročica se ne more zapreti do konca.</b>	<ul style="list-style-type: none"><li>- Izpraznite posodo za kapsule. Preverite, ali so morda blokirane kapsule v posodi za kapsule.</li><li>- Uporabite hladno posneto ali polposneto kravje mleko (približno 4°C).</li><li>- Sperite po vsakem mlečnem pripravku (glejte poglavje "Ročno pranje Rapid Cappuccino Systema").</li></ul>
<b>Kakovost mlečne pene ni po standardih.</b>	<ul style="list-style-type: none"><li>- Iz naprave odstranite vodni kamen.</li><li>- Ne uporabljajte zamrznjenega mleka.</li><li>- Prepričajte se, da je del za vsesavanje zraka čist. Glejte poglavje "Ročno pranje Rapid Cappuccino Systema".</li></ul>
<b>Ne morem vstopiti v način delovanja za nastavitve.</b>	<ul style="list-style-type: none"><li>- Preverite, ali ste odstranili posodo za mleko.</li><li>- Preverite, ali ste pritisnili in zadržali gumb za mleko 3 sekunde.</li><li>- Odstranite cev za odstranjevanje vodnega kamna.</li><li>- Ni mogoče vstopiti v način delovanja za nastavitve medtem ko se naprava ogreva.</li></ul>
<b>Sistem za mleko se ne zažene (opozorilna lučka za čiščenje sveti oranžno).</b>	<ul style="list-style-type: none"><li>- Priprava več kot 5 napitkov z mlekom brez vmesnega čiščenja: Očistite sistem za mleko.</li><li>- Več kot 30 min je preteklo od zadnje priprave napitka z mlekom: Očistite sistem za mleko.</li></ul>
<b>Posoda za mleko se ne more razstaviti.</b>	<ul style="list-style-type: none"><li>- Pritisnite gumb na bočni strani posode za mleko, da bi odstranili dele.</li><li>- Preberite si poglavje »Sestavljanje/Razstavljanje Rapid Cappuccino Systema«.</li></ul>
<b>Zvok pri izklopu naprave</b>	<ul style="list-style-type: none"><li>- Zvok označuje, da je naprava sedaj izklopljena.</li></ul>
<b>Ob primeru politja mleka, odklopite napravo.</b>	<ul style="list-style-type: none"><li>- Nemudoma očistite napravo.</li></ul>

# Contact **Nespresso**

## Obrnite se na **Nespresso** Klub

EN

SLO

As we may not have foreseen all uses of your appliance, should you need any additional information, in case of problems or simply to seek advice, call **Nespresso** or your **Nespresso** authorized representative. Contact details for your nearest **Nespresso** or your **Nespresso** authorized representative can be found in the «Welcome to **Nespresso**» folder in your machine box or at [nespresso.com](http://nespresso.com).

V primeru, da potrebujete kakršne koli dodatne informacije, v primeru težav ali če potrebujete le nasvet, pokličite **Nespresso** Klub. Kontaktnne podatke **Nespresso** Kluba najdete v mapi »Dobrodošli v **Nespresso**« v embalaži svoje naprave ali na [nespresso.si](http://nespresso.si).

## Disposal and Environmental Protection

### Varstvo okolja in reciklaža



Your appliance contains valuable materials that can be recovered or recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

Vaša naprava vsebuje dragocene materiale, ki jih je mogoče predelati ali reciklirati. Ločevanje preostalih odpadnih materialov na različne vrste olajša recikliranje dragocenih surovin. Napravo pustite na zbirnem mestu. Več informacij lahko dobite pri lokalnih organih.

Comme nous ne pouvons pas prévoir toutes les utilisations de votre appareil, pour de plus amples renseignements, en cas de problèmes ou tout simplement pour demander des conseils, appelez **Nespresso** ou votre revendeur agréé **Nespresso**. Vous trouverez les coordonnées de la boutique **Nespresso** ou du revendeur agréé **Nespresso** le plus proche dans la pochette "Bienvenue chez **Nespresso**" qui se trouve dans l'emballage de votre machine ou sur [nespresso.com](http://nespresso.com).





